
Figure 6H-1. Work Beyond the Shoulder (TA-1)

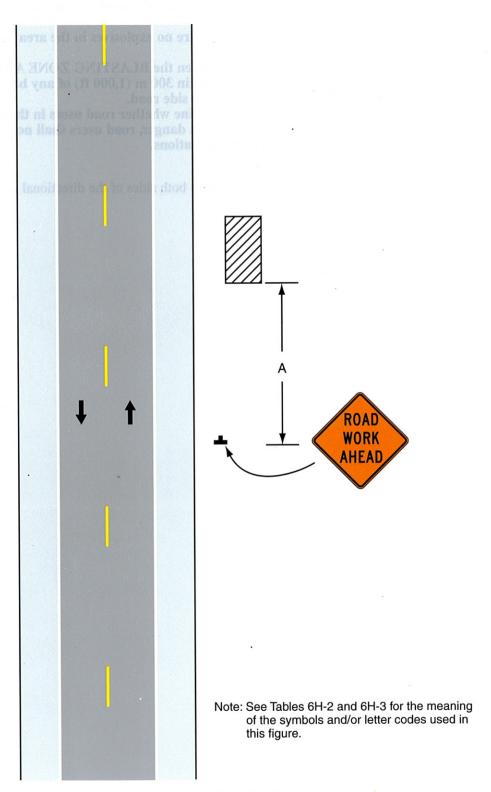

Typical Application 1